

Paragon™ Installation Instructions

WARNING

Do not install or remove unit while engine is running. Do not insert fingers or objects into open areas while in operation.

1. Remove pre-cleaner from its packaging and inspect for damage that may have occurred from shipping.

- If damaged and purchased from a retailer, return to the place of purchase.
- If damaged and was shipped to you contact the freight carrier

2. Turn off engine and secure from starting during installation.

3. Remove rain cap or pre-cleaner from engine intake pipe.

4. Install Paragon™ pre-cleaner onto engine intake pipe.

- Place clamp onto pre-cleaner.
- Slip pre-cleaner onto intake pipe.
- Ensure pre-cleaner is all the way down so that the slots are past the intake pipe.
- Tighten clamp enough to secure pre-cleaner without over tightening.

5. Ensure the pre-cleaner is not at risk from the engine exhaust.

- Ensure exhaust is directed away from pre-cleaner.
- Ensure the pre-cleaner has an adequate distance from hot surfaces to prevent damage.

6. For best performance inspect and clean any blocked or plugged OEM intake tubes if equipment is equipped with them.

7. Install a new air filter element.

8. Enjoy increased air filter life and fuel efficiency!

Your Paragon™ pre-cleaner is now ready for operation!



Paragon™ Installation Instructions

WARNING

Do not install or remove unit while engine is running. Do not insert fingers or objects into open areas while in operation.

1. Remove pre-cleaner from its packaging and inspect for damage that may have occurred from shipping.

- If damaged and purchased from a retailer, return to the place of purchase.
- If damaged and was shipped to you contact the freight carrier

2. Turn off engine and secure from starting during installation.

3. Remove rain cap or pre-cleaner from engine intake pipe.

4. Install Paragon™ pre-cleaner onto engine intake pipe.

- Place clamp onto pre-cleaner.
- Slip pre-cleaner onto intake pipe.
- Ensure pre-cleaner is all the way down so that the slots are past the intake pipe.
- Tighten clamp enough to secure pre-cleaner without over tightening.

5. Ensure the pre-cleaner is not at risk from the engine exhaust.

- Ensure exhaust is directed away from pre-cleaner.
- Ensure the pre-cleaner has an adequate distance from hot surfaces to prevent damage.

6. For best performance inspect and clean any blocked or plugged OEM intake tubes if equipment is equipped with them.

7. Install a new air filter element.

8. Enjoy increased air filter life and fuel efficiency!

Your Paragon™ pre-cleaner is now ready for operation!





Paragon™ Pre-cleaner Warranty

Knaus Air Solutions warrants the Paragon™ pre-cleaners to be of adequate materials and good workmanship.

Knaus Air Solutions obligation under this warranty are limited to repair/replace without charge for units which the company determines to be defective. The time limitations for such repair/replacement will be for its lifetime with the original purchaser.

Knaus Air Solutions will not assume transportation or other charges involved in such repair/replacement. This warranty does not cover units damaged by abuse, neglect, alteration, modification or unauthorized repair.

For Technical Support

Visit our website at knaus-solutions.com and complete Request More Info form



Paragon™ Pre-cleaner Warranty

Knaus Air Solutions warrants the Paragon™ pre-cleaners to be of adequate materials and good workmanship.

Knaus Air Solutions obligation under this warranty are limited to repair/replace without charge for units which the company determines to be defective. The time limitations for such repair/replacement will be for its lifetime with the original purchaser.

Knaus Air Solutions will not assume transportation or other charges involved in such repair/replacement. This warranty does not cover units damaged by abuse, neglect, alteration, modification or unauthorized repair.

For Technical Support

Visit our website at knaus-solutions.com and complete Request More Info form

